

INTRODUCTION


This document contains information about configuring and using Siro indoor air quality transmitter. Before reading this guide, check that the transmitter has been installed according to the installation instructions.

Siro is available with several optional air quality sensors. The modular device can be equipped with CO₂ concentration and VOC (Volatile Organic Compounds) measurements or alternatively PM (Particulate Matter) measurement, and in addition temperature and humidity measurements. Siro is available with a user interface that includes an LCD display and three pushbuttons. The device is always equipped with voltage outputs, and optionally with Modbus communication and current outputs.

The use and configuration of Siro is simple and easy by following this guide describing a Siro device with a display (-D).

Please note that this guide includes all measurement options. The device menu only shows the options that have been chosen to that particular device. You can find more information about the measurement options in the end of this document.

SCHEMATICS

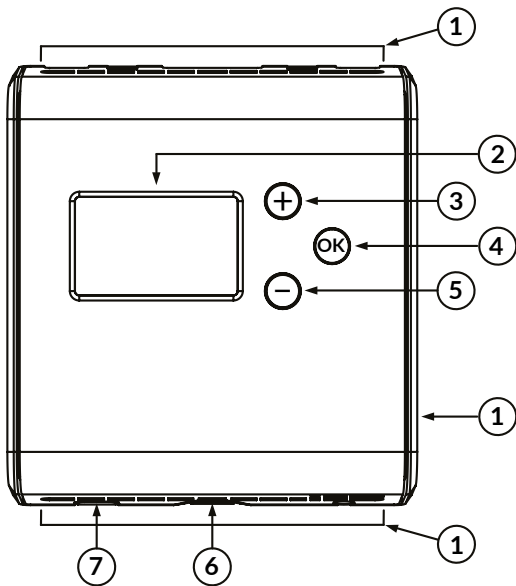




1	Air flow aperture
2	Display
3	Pushbutton + (up/increase)
4	Pushbutton OK (choose/confirm)
5	Pushbutton - (down/decrease)
6	Lid opening button
7	Opening for the wires

NAVIGATING THE MENU

The device's physical interface includes a display and three pushbuttons.

By using the user interface, it is possible to choose the desired measurement values on the display and to adjust the settings of the device. Note that when the menu locking jumper is installed, it is not possible to open the menu and the display will not react when pressing the **OK** button. Please see the installation instructions for more details about the locking jumper.

The button functions:


-  Scroll up in the menu / increase the value
-  Scroll down in the menu / decrease the value
-  Open the menu / confirm (press shortly) / go back to the basic view (keep the button down/press longer)

MENU STRUCTURE

Display values

- Celsius []
- Fahrenheit []
- CO2 []
- Humidity []
- CO2 EQ []
- IAQ []
- PM2.5 hour []
- PM10 hour []
- Exit

Brightness



Modbus

- Address ()
- Baudrate ()
- Parity ()
- Exit

Address 1...247	Baudrate 57600 38400 19200 9600	Parity none odd even
---------------------------	--	--------------------------------------

Outputs

- Out1 ()
- Out2 ()
- Out3 ()
- Out4 ()
- Exit

Not in use Celsius Fahrenheit CO2 Humidity TVOC ppm CO2 EQ TVOC ug/m3 PM2.5 hour PM10 hour PM2.5 day PM10 day PM1 PM2.5 PM10 Exit	Output scale 0-10 V 2-10 V 0-5 V 4-20 mA Exit	Low limit X . X	High limit X . X
--	---	---------------------------	----------------------------

Offset

- Celsius ()
- Fahrenheit ()
- CO2 ()
- Humidity ()
- TVOC ppm ()
- CO2 EQ ()
- TVOC ug/m3 ()
- PM ()
- Exit

Offset Celsius X . X	Offset Fahrenheit X . X	Offset CO2 X	Offset Humidity X . X	Offset TVOC ppm X . XX	Offset CO2 EQ X	Offset TVOC ug/m3 X	Offset PM coefficient X . XX
--------------------------------	-----------------------------------	------------------------	---------------------------------	----------------------------------	---------------------------	-------------------------------	--

Info

- SIRO SW_x_x 1/6
x.x.x.x.x.x
- Option 1, Option 2,
Option 3, Option 4
- ...


Output: 1 2/6 Output scale, Option 1 Low limit, High limit Output: 2 Output scale, Option 2 Low limit, High limit	Output: 3 3/6 Output scale, Option 3 Low limit, High limit Output: 4 Output scale, Option 4 Low limit, High limit	Offset: 4-5/6 Option 1 Option 2 Option 3 Option 4 ...	Modbus settings: 6/6 Address X Baudrate X Parity X
--	--	--	---

Exit

STEP 1: CHOOSING THE MEASUREMENT VALUES ON THE DISPLAY

STEP 1.1: DISPLAY VIEW

The basic view on the display is scaled based on how many measurement values have been chosen to be viewed on the display. 1-4 measurement values can be shown simultaneously (see figure 1a). If five or more values are selected, the measurements are shown one by one and the view changes every 10 seconds. Individual measurements can be scrolled in the basic view with \oplus and \ominus buttons. If the buttons are unused for 30 minutes, the basic view will reappear automatically.

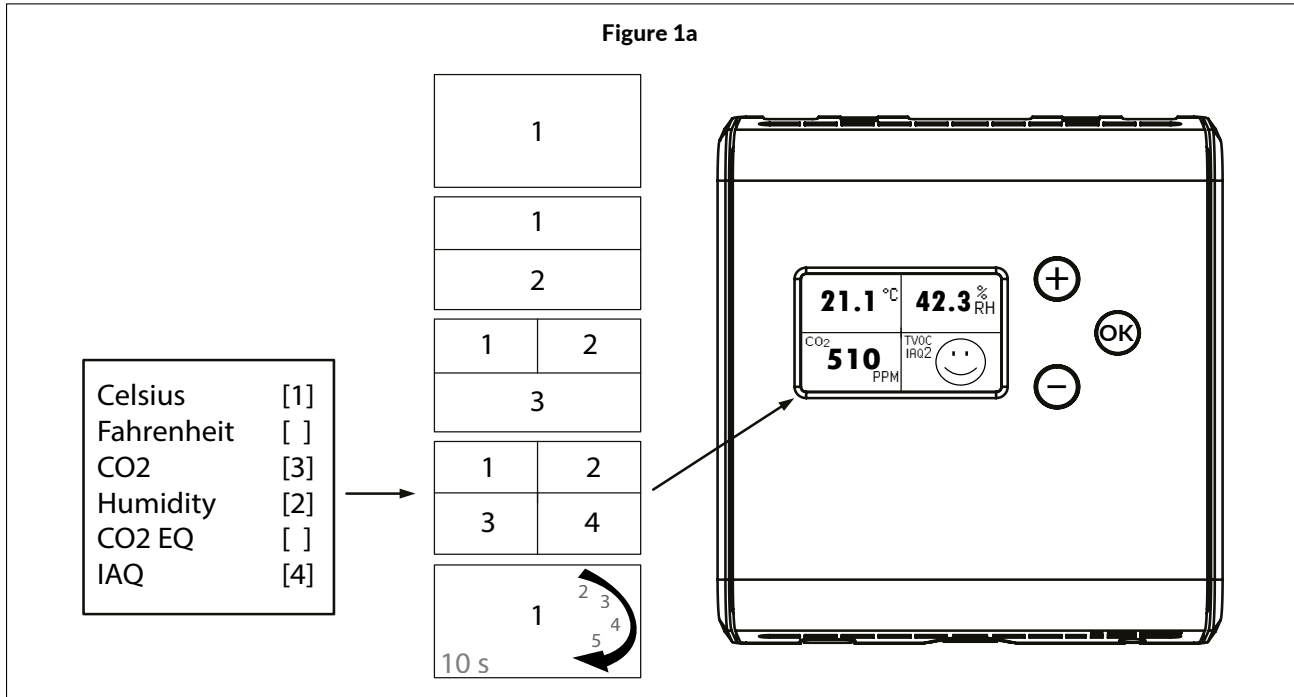


STEP 1.2: CHOOSING THE MEASUREMENT VALUES

For more information about the measurements, please see page 8.


1) Press OK to enter the settings menu.

2) Choose *Display values*.

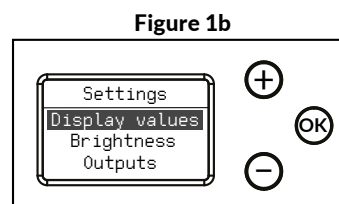


3) Choose the desired measurement values to be shown on the display.

- Scroll the menu by pressing the \oplus and \ominus buttons.
- Add/remove the desired measurement values by pressing the OK button.

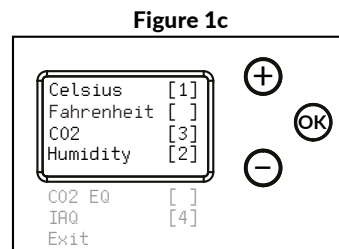

4) Choose *Exit* to exit the menu.

- Scroll the menu to *Exit* and press OK to return to the settings menu or keep the OK button down to return to the basic view.

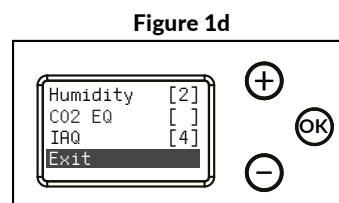


STEP 2: BRIGHTNESS CONTROL

This adjusts the brightness of the display in stand-by mode. The brightness of the display is always at the maximum level when the buttons are used.


1) Press **OK** to enter the settings menu.

Figure 2a

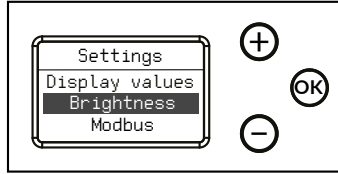

2) Choose **Brightness**.

Figure 2b

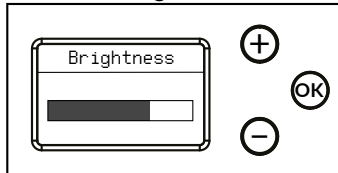

3) Adjust the brightness.

- Increase/decrease the brightness by pressing **+** and **-**.


4) Saving the chosen brightness level and exiting.

- Save the brightness level and return to the settings menu by pressing the **OK** button or keep the **OK** button down to return to the basic view.
- The chosen brightness level will settle when the buttons have been unpressed for 30 seconds.

STEP 3: MODBUS SETTINGS (MODBUS DEVICES ONLY)

1) Press **OK** to enter the settings menu.

Figure 3a

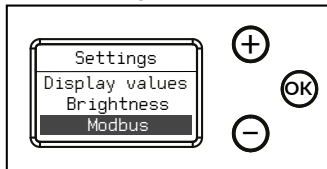


2) Choose **Modbus**.

3) Choose the desired parameters in the Modbus menu.

- The parameters can be scrolled by pressing the **+** and **-** buttons and chosen by pressing **OK**.

Figure 3b

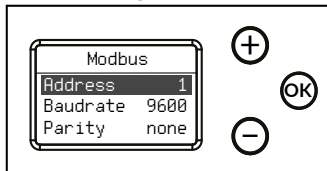

Address: 1 - 247 (default = 1)
 Baud rate: 9600 / 19200 / 38400 / 57600
 Parity: none / even / odd


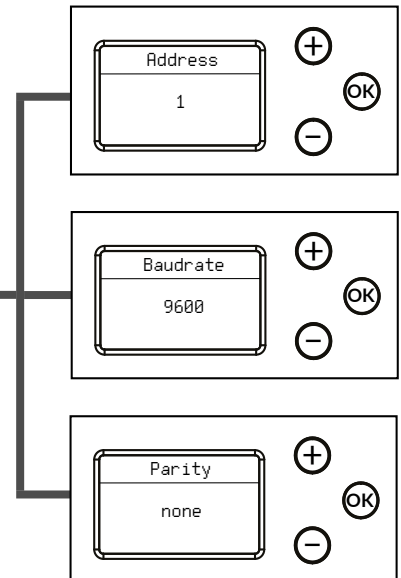


Figure 3c

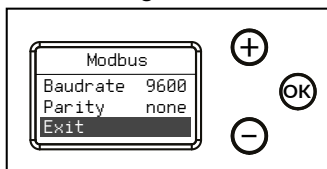

4) Choose **Exit** to exit the Modbus menu.

- Scroll to **Exit** and press **OK** to return to the settings menu or keep the **OK** button down to return to the basic view.


STEP 4: OUTPUTS

The device includes four freely configurable outputs. Current (optional) or voltage output can be chosen for each of them. The output signal has to be chosen first with a jumper (see the installation instructions), after which the output settings can be changed in the **Outputs** menu.

1) Press **OK** to enter the settings menu.

2) Choose **Outputs**.


Figure 4a

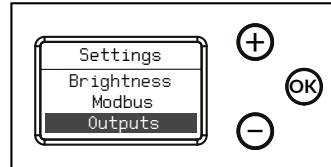

3) Choose measurement, scale and limits for each output.


- The menus and limits can be scrolled by pressing the (+) and (-) buttons. Choose the measurement and scale and set the limits by pressing the **OK** button.

Figure 4b

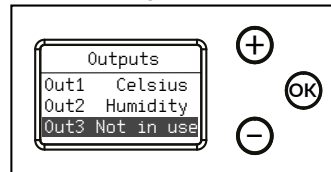


Measurement: Not in use / Celsius ^{1*} / Fahrenheit ^{1*} / CO2 / Humidity / TVOC ppm ^{2*} / CO2 EQ / TVOC ug/m3 ^{2*} / PM2.5 hour / PM10 hour / PM2.5 day / PM10 day / PM1 / PM2.5 / PM10

- 1*) Only one of these can be chosen for outputs.
- 2*) Only one of these can be chosen for outputs.

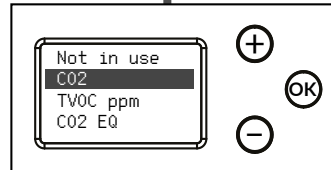


Scale: 0-10 V / 2-10 V / 0-5 V ^{1*} / 4-20 mA ^{2*}


- 1*) When using voltage output, the jumper setting of that output must be set to V.
- 2*) When using current output, the jumper setting of that output must be set to mA.

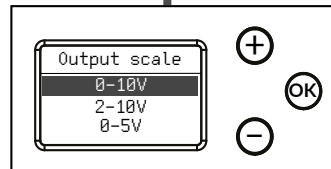

Low limit: See Table 1 - Output limits

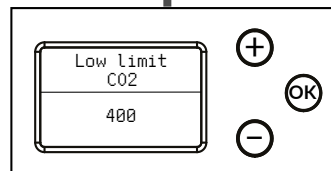

High limit: See Table 1 - Output limits

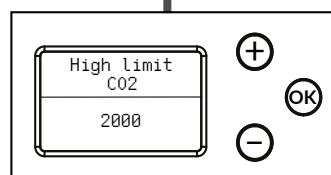

OUTPUTS CONTINUED


Table 1 - Output limits

Measurement	Default limits	Adjustable low limit	Adjustable high limit	Smallest range available
Celsius ^{1*}	0.0...50.0 °C	0.0...45.0 °C	5.0...50.0 °C	5.0 °C
Fahrenheit ^{1*}	32...122 °F	32...113 °F	41...122 °F	9 °F
CO ₂	400...2000 ppm	0...1900 ppm	500...2000 ppm	100 ppm
Humidity	0.0...100.0 %	0.0...90.0 %	10.0...100.0 %	10.0 %
TVOC ppm	0.00...30.00 ppm	0.00...28.00 ppm	2.00...30.00 ppm	2.00 ppm
CO ₂ EQ	400...2000 ppm	0...9900 ppm	500...10000 ppm	100 ppm
TVOC µg/m ³	0...3000 µg/m ³	0...9900 µg/m ³	100...10000 µg/m ³	100 µg/m ³
PM (all) ^{2*}	0...500 µg/m ³	0...480 µg/m ³	20...500 µg/m ³	20 µg/m ³

1*) Celsius and Fahrenheit limits are interdependent, and thus a change in one limit of a measurement will also change the limits of the other measurement.
 2*) PM2.5, PM2.5 hour and PM2.5 day share the same limits.
 PM10, PM10 hour and PM10 day share the same limits.
 Changing one limit will also change the limits of the two other measurements.

- 4) Choose **Exit** to exit the Outputs menu.
- Scroll to **Exit** and press **OK** to return to the settings menu or keep the **OK** button down to return to the basic view.

Figure 4c

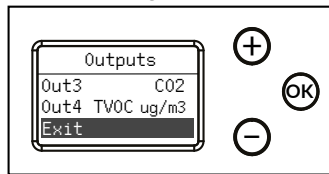


STEP 5: OFFSET

The offset feature enables field calibration. This is necessary in applications that need annual calibration.


- 1) Press **OK** to enter the settings menu.

Figure 5a

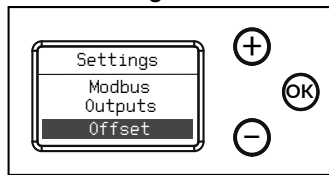

- 2) Choose **Offset**.

Figure 5b

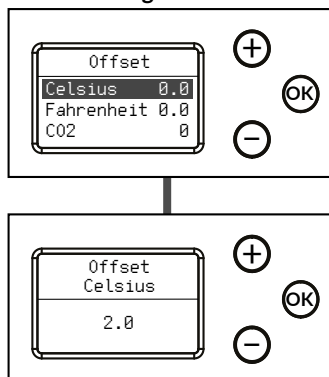

- 3) Choose offset value for every measurement.
- The Offset menu and limits can be scrolled by pressing the **+** and **-** buttons. Choose the measurement and set the limits by pressing the **OK** button.
 See Table 2 - Offset limits.

OFFSET CONTINUED


Table 2 - Offset limits

Measurement	Limit
Celsius ^{1*}	±5.0 °C
Fahrenheit ^{1*}	±9.0 °F
CO ₂	±200 ppm
Humidity	±10.0 %
TVOC ppm	±3.00 ppm
CO ₂ EQ	±200 ppm
TVOC ug/m ³ ^{2*}	±1000 µg/m ³
PM ^{3*}	0.30...2.00 (offset multiplier)

1*) Celsius and Fahrenheit limits are interdependent, and thus a change in one limit of a measurement will also change the limits of the other measurement.
 2*) TVOC µg/m³ offset will also affect the IAQ value based on TVOC.
 3*) PM offset will also affect the IAQ value based on PM.

- 4) Choose **Exit** to exit the Offset menu.
- Scroll to **Exit** and press **OK** to return to the settings menu or keep the **OK** button down to return to the basic view.

Figure 5c

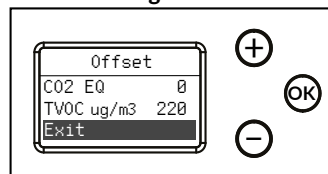

STEP 6: INFO VIEW


Info view is a summary of the information and settings of the device.

- 1) Press **OK** to enter the settings menu.

- 2) Choose **Info**.
- Scroll by pressing **+** and **-**.

Page 1: Version number and buildup of the device.
 Page 2-3: Outputs
 Page 4-5: Offsets
 Page 6: Modbus settings (Modbus devices only)*

Figure 6a

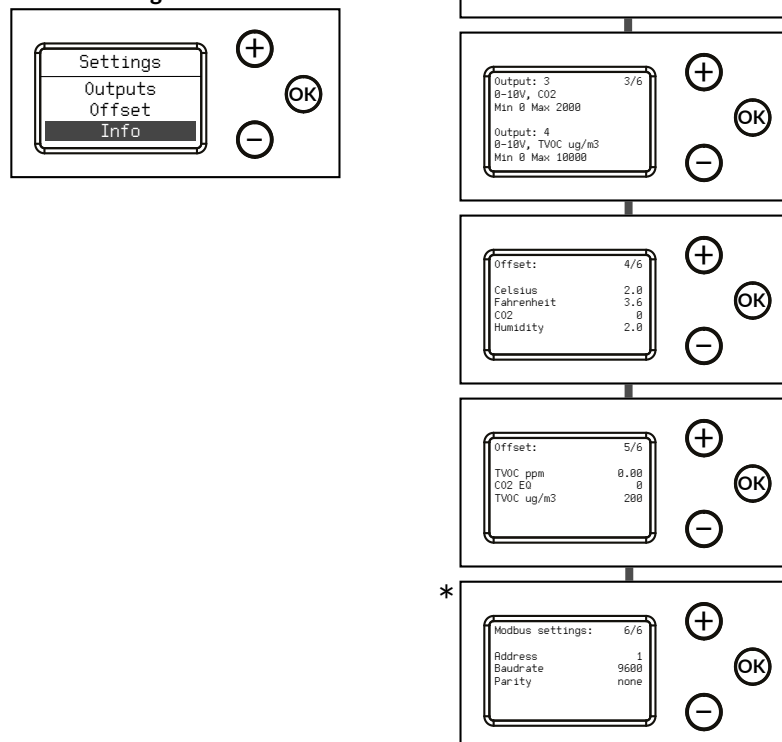

- 3) Press **OK** to exit the Info view.
- Press **OK** to return to the settings menu or keep the **OK** button down to return to the basic view.

INFORMATION ABOUT THE MEASUREMENTS

Table 3 - Additional information about the measurements

Measurement	Text in the Siro user interface	Description	Unit
T (Temperature)	Celsius	Temperature	°C
	Fahrenheit	Temperature	°F
rH (Relative humidity)	Humidity	Relative humidity	%rH
CO ₂ (Carbon dioxide)	CO2	Carbon dioxide concentration	ppm
VOC (Volatile Organic Compounds)*	TVOC ppm	Total concentration of organic volatile compounds	ppm
	TVOC ug/m3	Total concentration of organic volatile compounds	µg/m3
	CO2 EQ	Organic volatile compounds value converted into CO ₂ equivalent	ppm
	IAQ	Indoor air quality index, based on TVOC µg/m3 concentration, see Table 4	1-5, emoticon
PM (Particulate Matter)	PM2.5 hour	1-hour mean of particulate matter concentration for particulates with diameter under 2.5 µm	µg/m3
	PM10 hour	1-hour mean of particulate matter concentration for particulates with diameter under 10 µm	µg/m3
	PM2.5 day	24-hour mean of particulate matter concentration for particulates with diameter under 2.5 µm	µg/m3
	PM10 day	24-hour mean of particulate matter concentration for particulates with diameter under 10 µm	µg/m3
	PM1	Momentary value of particulate matter concentration for particulates with diameter under 1 µm	µg/m3
	PM2.5	Momentary value of particulate matter concentration for particulates with diameter under 2.5 µm	µg/m3
	PM10	Momentary value of particulate matter concentration for particulates with diameter under 10 µm	µg/m3
	IAQ	Indoor air quality index, based on hourly average of PM2.5, see Table 5	1-5, emoticon

*VOC sensor is tuned for typical IAQ Mix of 22 VOCs as defined by Møllhave et al. (1997)

Table 4 - TVOC levels

TVOC IAQ		
IAQ level	TVOC [µg/m3]	Air quality
1	<300	Very good
2	300 - 1 000	Good
3	1 000 - 3 000	Moderate
4	3 000 - 10 000	Bad
5	>10 000	Very bad

Based on the German Environment Agency (UBA) research.

Table 5 - PM levels

PM IAQ		
IAQ level	PM2.5 ^{1h avg.} [µg/m3]	Air quality
1	<25	Very good
2	26 - 37	Good
3	38-50	Moderate
4	51-75	Bad
5	>75	Very bad

Based on the World Health Organization (WHO) research and hourly average of PM2.5 concentration.